

EXLAN WEAR SKIDS

Instruction for replacement




When the wear indicators appear, it is time to replace your EXLAN wear skids



<u>Basic equipment needed:</u> Screw driver, Hammer or mallet, Wooden block, Damp cloth





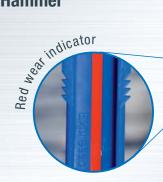



FOR QUICK REPLACEMENT OF THE EXLAN WEAR SKIDS

- 1 Using a screw driver, pry off the 4 special fixing clamps. (a)
- 2 Remove the 2 worn rear skids and clean the aluminium surface of any soil or debris.
- **3** Fit the new EXLAN skids. Ensure they are positioned centrally.
- 4 Lock the new skids into position, by tapping the special fixing clamps approx 20 mm in the direction as shown. **(b)**

! Note the clamps will only fit one way !







Our Tip!

Always remember to keep a spare set of skids and clamps on hand READY FOR USE!

Re-ORDER DETAILS	Туре	Spare Parts	Colour	Qty per hand truck	Qty required
	10 110 14	EXLAN skid	Blue	2	
	10 118 78	Fixing clamp for skid 10 110 14	Blue	4	
	10 110 14RT	EXLAN skid	Red	2	
	10 118 78RT	Fixing clamp for skid 10 110 14RT	Red	4	